



DESIGN A SWITCH TO MEET YOUR NEEDS

SERIES 24 AND SERIES 31 ROTARY SWITCHES

 
Description Indexing Contact Diagram* Wiring Diagram Ordering Information

Detent Action Rotary Switches

**SINGLE-THROW
OFF - ON**
Stop screw positions: 1 & 7
Handle: Oval



DECK	CONTACTS	POS.	
		OFF	ON
1	1 2	○	○
	1 3	○	○
	1 6	○	○




Series 24 = Series 24 No. Of Decks 01 = 1 06 = 6 Shorting Blank = No

31 = Series 31 02 = 2 07 = 7 S = Yes

Assemblage 03 = 3 08 = 8
2 = 2 04 = 4 09 = 9
05 = 5 10 = 10

Model numbers are for universal switches that provide all contacting shown. To limit switches to positions shown put limit screws in rear stop plate.

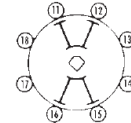


** 11-12, 15-16 connected internally in normal position.

**DOUBLE-THROW
No Off**
Stop screw positions: 1 & 7
Handle: Oval




DECK	CONTACTS	POS.	
		1	2
1	1 2	○	○
	1 3	○	○
	1 6	○	○

 

**DOUBLE-THROW
With Off**
Stop screw positions: 2 & 7
Handle: Oval



DECK	CONTACTS	POS.	
		OFF	2
1	1 1	○	○
	1 2	○	○
	1 5	○	○
	1 6	○	○

 

Jumpers** for these arrangements are sold separately (2 per deck Series 24 P/N 02011-10-C3
2 per deck Series 31 P/N 03057-1-C3).


* Contacts are shown for the first deck. All decks are identical.
Contact number changes in additional decks (e.g. 11 is deck 1, 21 is deck 2, etc.).

Momentary (Spring-Return) Action Rotary Switches

**SINGLE-THROW
OFF - ON**
Stop screw positions: 1 & 7
Handle: Pistol Grip



DECK	CONTACTS	POS.	
		OFF	ON
1	1 2	○	○
	1 3	○	○
	1 6	○	○

 


Series 74 = Series 24 No. Of Decks 01 = 1 Shorting Blank = No

75 = Series 31 02 = 2 07 = 7 S = Yes

Assemblage 03 = 3 04 = 4
2 = 2 05 = 5

Model numbers are for universal switches that provide all contacting shown. To limit switches to positions shown put limit screws in rear stop plate.

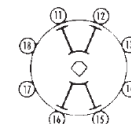


** 11-12, 15-16 connected internally in normal position.

**DOUBLE-THROW
No Off**
Stop screw positions: 1 & 7
Handle: Pistol Grip




DECK	CONTACTS	POS.	
		1	2
1	1 2	○	○
	1 3	○	○
	1 6	○	○

 

**DOUBLE-THROW
With Off**
Stop screw positions: 2 & 7
Handle: Pistol Grip



DECK	CONTACTS	POS.	
		OFF	2
1	1 1	○	○
	1 2	○	○
	1 5	○	○
	1 6	○	○

 

Jumpers** for these arrangements are sold separately (2 per deck Series 24 P/N 02011-10-C3
2 per deck Series 31 P/N 03057-1-C3).

* Contacts are shown for the first deck. All decks are identical.
Contact number changes in additional decks (e.g. 11 is deck 1, 21 is deck 2, etc.).

Rotary Tap Switches (2-7 Throw Switches With Off, Oval Handle)

TWO-THROW
Stop screw positions: 1 & 7

 
TRIPLE-THROW
Stop screw positions: 1 & 5

FOUR-THROW
Stop screw positions: 1 & 4

FIVE-THROW
Stop screw positions: 1 & 3



SIX-THROW
Stop screw positions: 1 & 2

SEVEN-THROW
Stop screw positions: none



Indexing For 2-7 Throw Tap Switches

DECK	CONTACTS	POSITIONS						
		OFF	1	2	3	4	5	6
1	1 1	○	○	○	○	○	○	○
	1 2	○	○	○	○	○	○	○
	1 3	○	○	○	○	○	○	○
	1 4	○	○	○	○	○	○	○
	1 5	○	○	○	○	○	○	○
	1 6	○	○	○	○	○	○	○
	1 7	○	○	○	○	○	○	○
	1 8	○	○	○	○	○	○	○

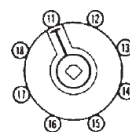 

Series 24 = Series 24 No. Of Decks 01 = 1 Shorting Blank = No

31 = Series 31 02 = 2 07 = 7 S = Yes

Assemblage 03 = 3 04 = 4 09 = 9
3 = 3 05 = 5 10 = 10

Model numbers are for universal switches that provide all contacting shown. To limit switches to positions shown put limit screws in rear stop plate.

* Contacts are shown for the first deck. All decks are identical. Contact number changes in additional decks (e.g. 11 is deck 1, 21 is deck 2, etc.).